


# How to verify correct API is running

**NOTE: Only the following THINC API versions will work with MIRA LITE: 1.12.1.0 or 1.15.0.0 or 1.17.2.0**  
If a different API version is running, contact your Okuma distributor or Okuma directly for a FREE upgrade.

1. Go to the P-Control:
2. On the right bottom of the task bar you will see API symbol. (as highlighted below)

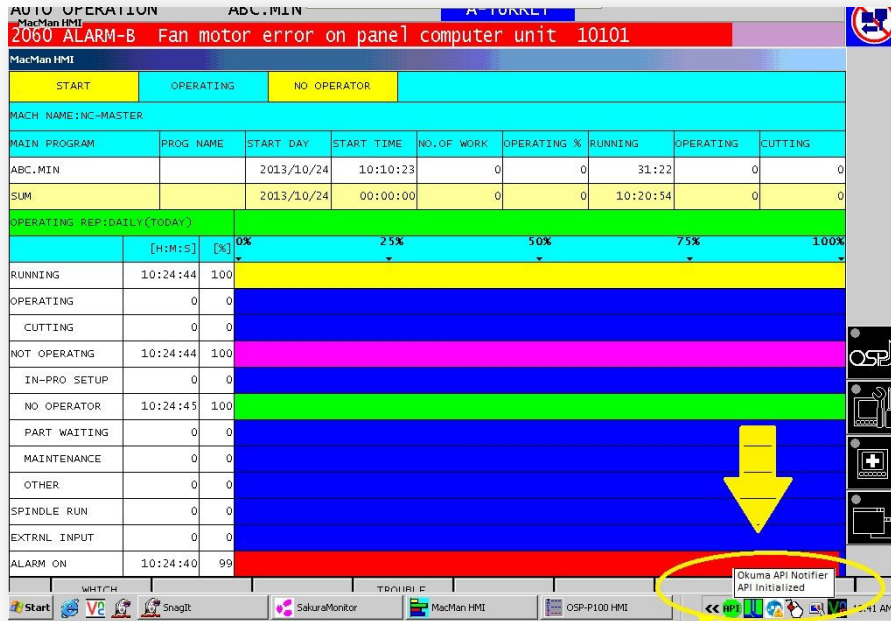

3. Right click on the API round logo. – API information will appear on the screen. (as shown in the screenshot below)



✓ Ok to Install